

A new feeling. *One panel at a time.*

For wallpaper installed with adhesive applied to the wall. This guide does not cover Peel & Stick.

Before you begin

Let cut panels acclimatise	48 hours
Let mixed adhesive stand	10 minutes
Allow wallpaper to dry	24 hours

What you'll need

Measure & cut

Pencil
Level
Measuring tape
Scissors
Craft knife


Mix your adhesive

Mixing bucket
Mixing stick or stirrer

Smooth & finish

Wallpaper roller or
smoothing spatula
Seam roller
Soft sponge or cloth


Follow all 14 steps on the next pages. Use the mixing ratio on your adhesive packaging and the drying time recommended by your primer manufacturer.

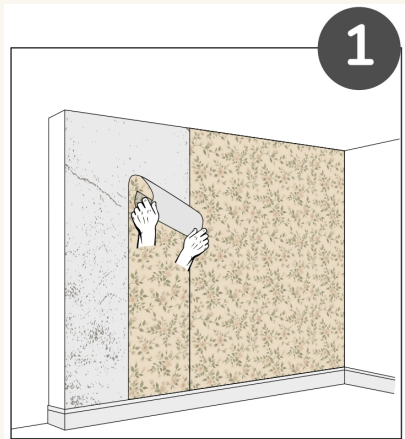

STEP 1 OF 14

Remove old coverings

Before applying your new wallpaper, remove any old wall coverings.

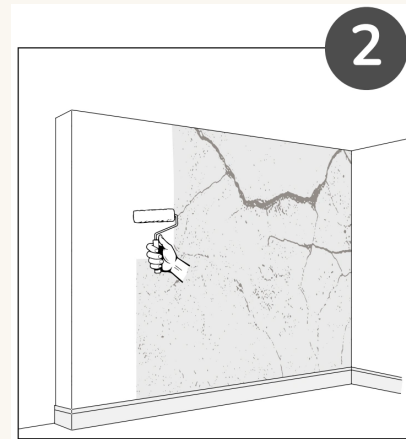

STEP 2 OF 14

Prepare your wall


Clean the wall with a soft cloth and a mild, non-abrasive cleaner. Fill uneven areas with putty and apply primer. Follow the manufacturer's recommended drying time.



STEP 3 OF 14

Cut, then let it settle


Your wallpaper comes in one roll. Cut it into panels along the marked lines. Keep the service markings until after installation. The last panel is usually narrower: cut it lengthwise, leaving a small right-hand margin for alignment. After cutting, leave the panels in the room for 48 hours to acclimatise.

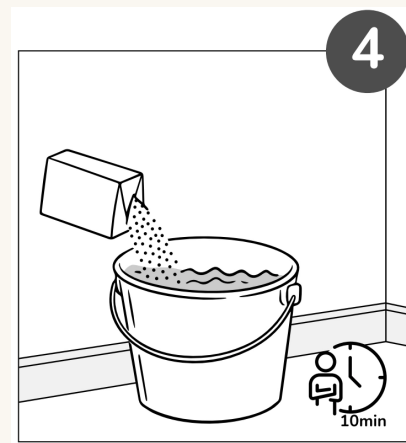

STEP 4 OF 14

Mix the adhesive

Fill a clean bucket with cold water, using the ratio shown on the adhesive packaging. Add the adhesive powder while stirring. Mix until smooth, then let it stand for 10 minutes before use.

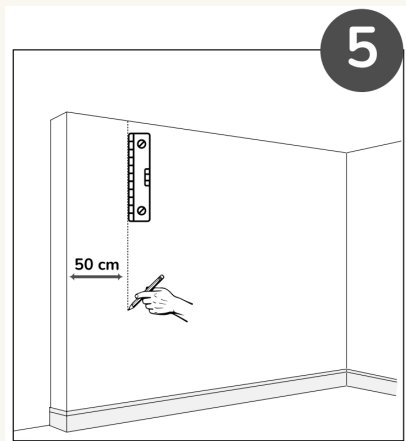

STEP 5 OF 14

Mark your starting line

Measure the width of your first panel. Mark the same distance from the left edge of the wall, then use a level to draw a vertical guide line. Keep the pencil mark light.



STEP 6 OF 14

Paste the wall


Apply glue directly to the wall, covering an area slightly wider than the first panel.



STEP 7 OF 14

Hang the first panel

Work from left to right, starting with panel 1. Align it with the vertical guide and press gently with a seam roller. Avoid getting glue on the front.

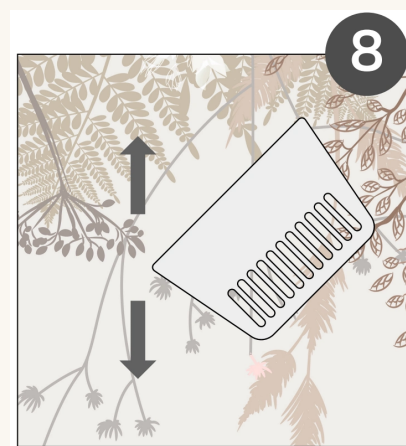

STEP 8 OF 14

Smooth it gently

Use a smoothing spatula or wallpaper roller, working from the centre outwards. Remove air bubbles with gentle strokes.



STEP 9 OF 14

Paste the next section


Apply glue directly to the wall, covering an area slightly wider than the next panel.



STEP 10 OF 14

Match the pattern

Apply the next panel edge to edge, without overlap, following the numbered order. Carefully align the pattern and press the seams gently with a seam roller or spatula.

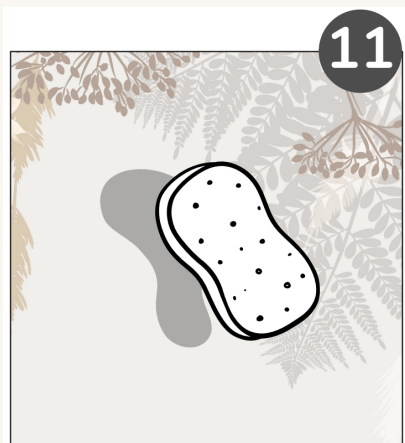

STEP 11 OF 14

Wipe away excess glue

Gently wipe off excess adhesive with a soft sponge or cloth. Avoid rubbing, which may damage the surface.



STEP 12 OF 14

Continue across your wall

Repeat steps 9–11 until all wallpaper panels are applied.



STEP 13 OF 14

Trim the edges

Trim excess wallpaper at the top and bottom with a craft knife.



STEP 14 OF 14

Let your wall dry

Leave the wallpaper to dry for 24 hours. Avoid draughts and significant temperature changes during this time.