

A new feeling. *One panel at a time.*

For self-adhesive Peel & Stick wallpaper. No separate adhesive is needed.

Before you begin

Let cut panels acclimatise	48 hours
Peel back the top edge	30-50 cm
Keep the room temperature stable	24 hours

What you'll need

Measure & mark

Pencil
Spirit level
Measuring tape or ruler


Cut & trim

Scissors
Craft knife
Straightedge

Smooth gently

Plastic smoother
or soft cloth


Follow all 10 steps on the next pages. Do not stretch the material. Match the panels edge to edge without overlap.

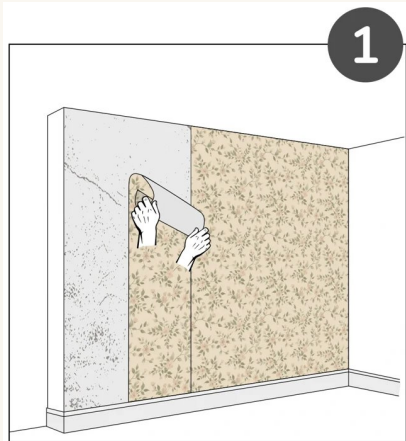

STEP 1 OF 10

Clear your wall


Completely remove old wallpaper, paint residue and other coverings. The surface must be clean and dry.

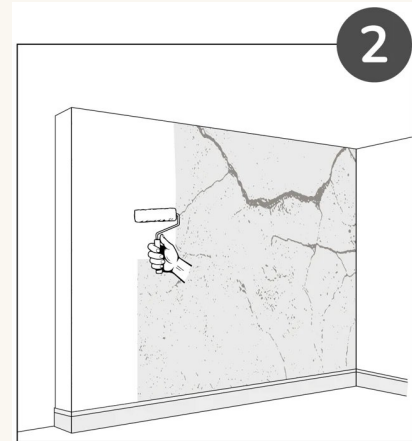

STEP 2 OF 10

Prepare the surface


Fill, sand and prime the wall so the self-adhesive layer sticks properly. If you skip these steps, at least clean the surface with a mild soapy solution to remove dust and dirt, then let it dry completely.

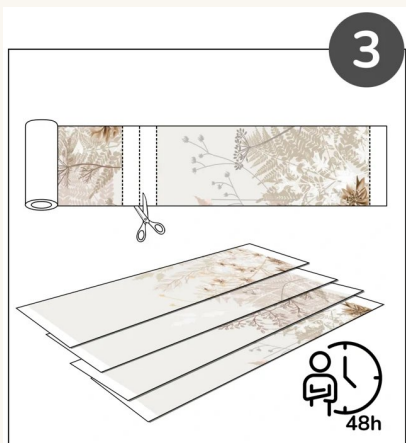

STEP 3 OF 10

Cut and acclimatise


Cut the roll into panels along the cutting lines. Lay them on the floor to check pattern alignment. Leave the wallpaper in the room for 48 hours to acclimatise and flatten.

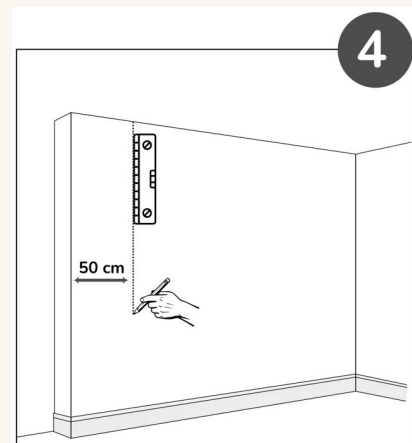

STEP 4 OF 10

Mark your starting line


Measure 50 cm, the width of the first panel, from the left corner. Use a level and pencil to draw a precise vertical line.

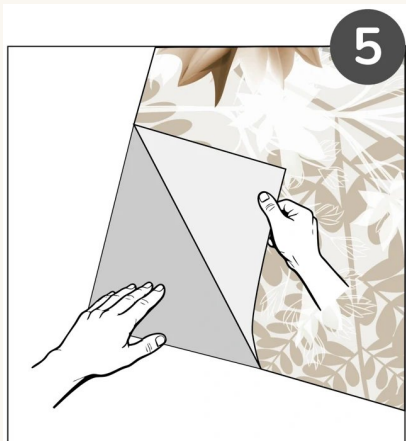

STEP 5 OF 10

Peel back the top


Take panel 1. Peel back approximately 30–50 cm of protective backing paper from the top edge.

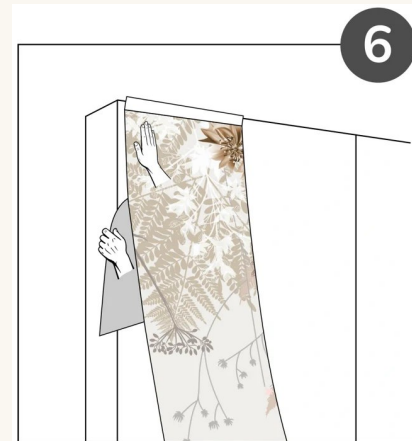

STEP 6 OF 10

Position the first panel

Place the top edge against the wall near the ceiling. Align the right edge of the panel precisely with your vertical guide line.

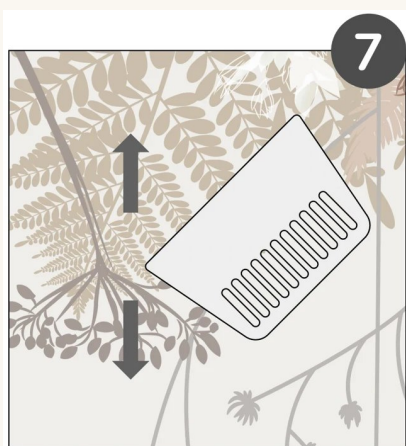

STEP 7 OF 10

Peel and smooth gently

Gradually remove the backing paper from top to bottom while smoothing from the centre outwards with a plastic smoother. Do not stretch the material: this can distort the pattern and cause gaps after the adhesive sets.



STEP 8 OF 10

Match the next panel

Apply the remaining panels in the same way, matching the pattern edge to edge, without overlap. Remember not to stretch the material.



STEP 9 OF 10

Trim the edges

Once the panel is fixed, carefully trim excess material, including the numbered margins, at the top and bottom with a craft knife and a straightedge.



STEP 10 OF 10

Give it time to settle

For the first 24 hours, avoid draughts and maintain a stable room temperature so the adhesive bonds correctly.